


# Dupline® Display for Carpark Type GP 6763 0106 / 07 / 08

CARLO GAVAZZI

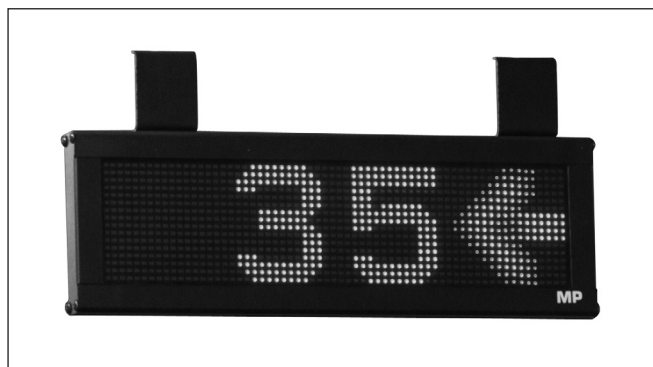

- Brightly lit green and red LEDs
- Display built into robust aluminium box
- RS485 communication
- Internal dipswitch for selection of digit type
- cULus approved

## Product Description

The GP6763 01xx display is part of a car park system which, among other things, contains a GP3482 9091 monitor and several sensor types with type numbers GP6220 220x and GP6240 2224.

By means of LEDs, the GP6763 01xx signals the direction and/or number of free parking bays.

Because of the method of communication, it is possible to interconnect several displays on the same network. The display is available in indoor and outdoor versions.

## General Specifications

<b>Technology:</b>	LED SMD
<b>Matrix resolution</b>	16 x 16 pixel
<b>LED colour</b>	Red and green (two colour combination: Amber)
<b>Viewing distance</b>	Up to 50 m
<b>Symbols configuration</b>	
Digits / characters	Depends of the selected displays
Cross & Arrow symbols	Yes (configurable and animated)
Disabled symbol	No
GP6763 0106	No
GP6763 0107 / 08	Yes
<b>Brightness control</b>	Automatic (light sensor)
<b>Interface</b>	RS485
Baudrate	4800
<b>Protocol</b>	Carpark
<b>Casing</b>	Aluminium
<b>Environment</b>	
Operating temperature	-15° to 50°C
Degree of protection	IP30 (indoor) IP55 (outdoor)
<b>Humidity</b> (non condensing)	0 - 90% relative humidity
<b>Power supply</b>	18-24 VDC
<b>Consumption</b> (maximum/typical)	
GP6763 0106	25 W / 15W
GP6763 0107 / 08	50 W / 30W
<b>Dimensions</b> (h x w x d)	
GP6763 0106(A)	
Indoor version	145 x 145 x 60 mm
Outdoor version (A)	185 x 185 x 92 mm

## Ordering key

**GP 6763 01XXX**

Type: Dupline® \_\_\_\_\_  
Carpark \_\_\_\_\_  
Display \_\_\_\_\_  
Type \_\_\_\_\_

## General Specifications (cont.)

GP6763 0107 / 08(A)	
Indoor version	145 x 240 x 60 mm
Outdoor version (A)	185 x 300 x 92 mm
<b>Weight</b>	
GP6763 0106(A)	
Indoor version	500 g
Outdoor version (A)	800 g
GP6763 0107 / 08(A)	
Indoor version	1000 g
Outdoor version (A)	1400 g
<b>Approval</b>	cULus (UL60950)

## Type Selection

GP6763 0106	1 Arrow
GP6763 0106A	1 Arrow outdoor
GP6763 0107	1 Arrow + HCP (right)
GP6763 0107A	1 Arrow + HCP (right) outdoor
GP6763 0108	1 Arrow + HCP (left)
GP6763 0108A	1 Arrow + HCP (left) outdoor

## Display types

GP6763 0106	
GP6763 0107	
GP6763 0108	



## Mode of Operation

The dip switch can be accessed by removing the cap placed on the back cover of the panel. This cover is attached by 2 screws. It is only necessary to remove the screw from the bottom to access the dip switch located on the main controller.

The dip switch configuration (DS2) has the following settings:

Bit 3	Bit 2	Bit 1	Vacant Mode
0	0	0	Totalize
0	0	1	Arrow rotating from bottom to top
0	1	0	Arrow rotating from left to right
0	1	1	Arrow rotating from right to left
1	0	0	Arrow rotating from top to bottom
1	0	1	Steady Cross
1	1	0	Reserved – Must be 0
1	1	1	Nothing displayed

Bit 6	Bit 5	Bit 4	Occupied Mode
0	0	0	Totalize
0	0	1	Arrow rotating from bottom to top
0	1	0	Arrow rotating from left to right
0	1	1	Arrow rotating from right to left
1	0	0	Arrow rotating from top to bottom
1	0	1	Steady Cross
1	1	0	Steady Cross and red arrow
1	1	1	Nothing displayed

The dip switch configuration (DS3) defines the internal panel sizing and has the following settings:

Bit 3	Bit 2	Bit 1	Panel Dimensions
0	0	0	16 x 16
0	0	1	16 x 32
0	1	0	16 x 48
0	1	1	16 x 64
1	0	0	16 x 80
1	0	1	Reserved - Must be 0
1	1	0	Reserved - Must be 0
1	1	1	Reserved - Must be 0

Bit 7	Number of symbols	Bit 8	Symbol Alignment
0	1 symbol	0	Symbol with right alignment
1	2 symbols	1	Symbol with left alignment

Bit 8	Bit 7	Bit 6	Bit 5	Bit 4	
0	0	0	0	0	Reserved – Must be 0


During the panel configuration, the following operation notes should be considered:

Configuration	Operation Mode
Totalize Mode	<ul style="list-style-type: none"> <li>In totalize mode, only numbers are displayed. If the number of digits exceeds the number of panel boards, nothing is displayed.</li> <li>The numbers are always displayed with right alignment.</li> </ul>
Symbol Modes	<ul style="list-style-type: none"> <li>The symbols always takes priority over the numbers. If the number doesn't fit in the panel, only the symbol is displayed with the selected alignment.</li> <li>In the "occupied" mode operation, the red Arrow-Cross symbol is displayed instead of the number, so it can be combined with the other symbols. Only in the special case of the "Steady cross and red arrow" dip switch selection, the red Arrow-Cross symbol is displayed alone in the panel.</li> <li>In the "Steady cross and red arrow" dip switch selection, only the cross is displayed if the panel is in 16x16 resolution.</li> </ul>


## Wiring Diagram / DIP Switch Settings

Removing the back cover, it's possible to access the panel controller. Next to the controller is a free space that can be used by the customer for placement of specific equipment.

The power cable is accessible from outside the panel. The RS485 wiring communication is only accessible within the panel and can be extended to the outside.

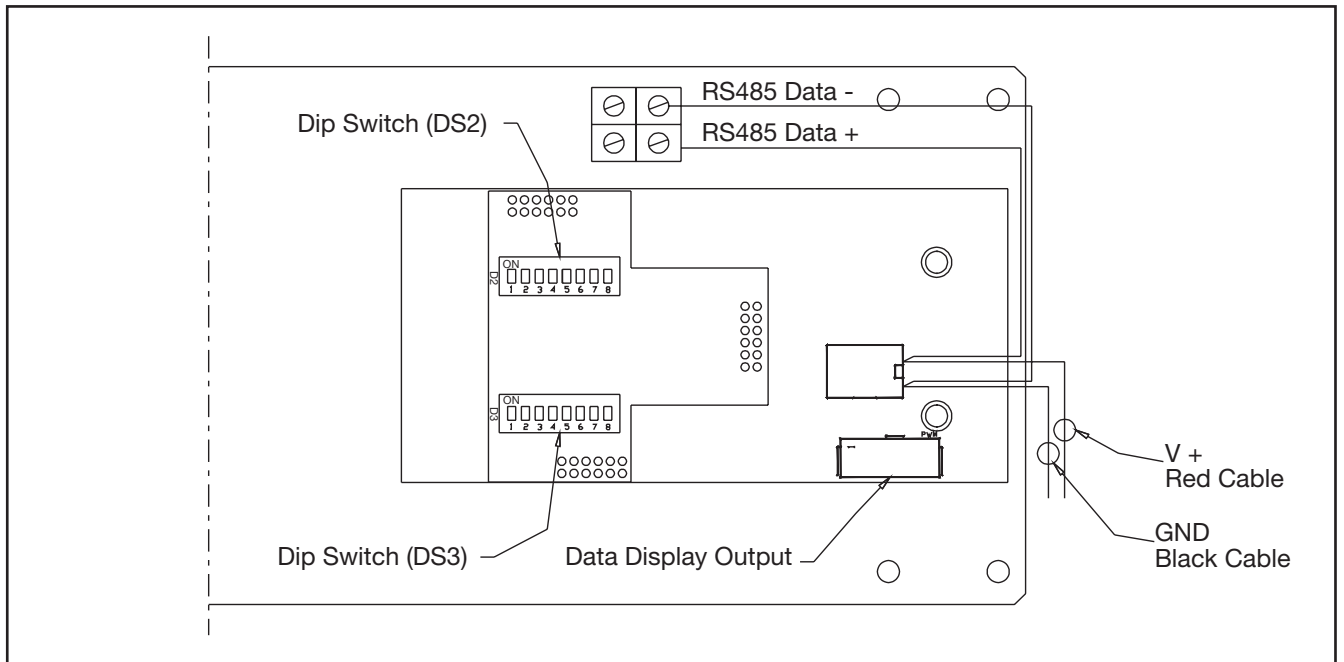

## Dimensions

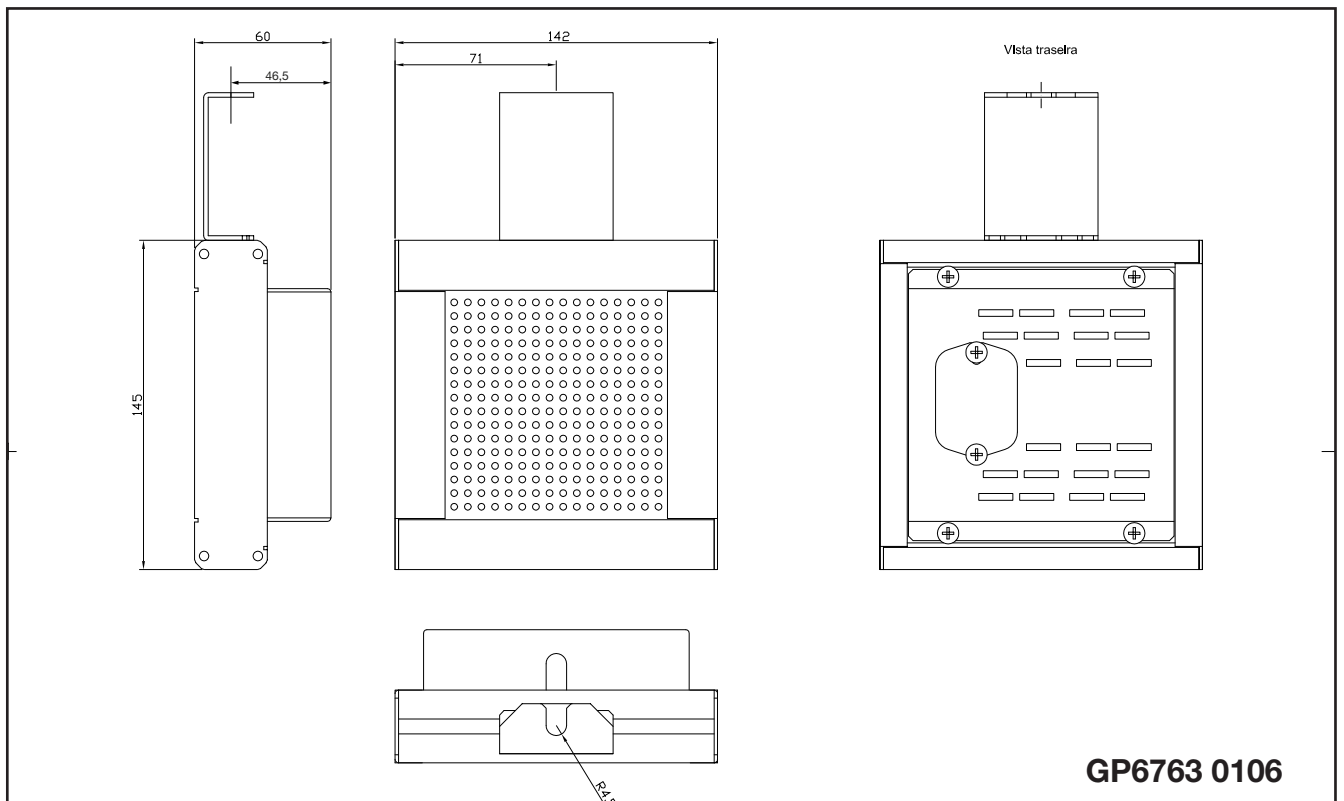

## Dimensions

