
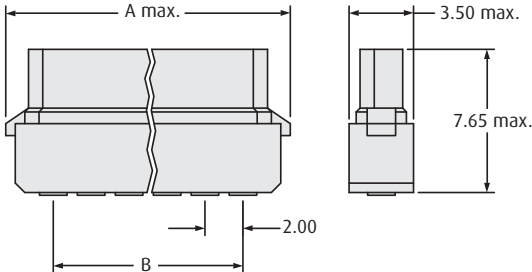
 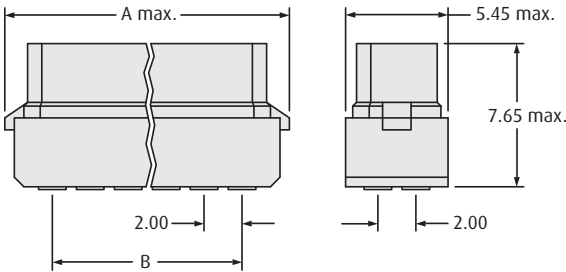


Datamate Connectors

Female Crimp

- ❖ Part numbers are for housings and the equivalent number of contacts.
- ❖ Contacts are rear insertable.
- ❖ For British Standard versions see pages 14 to 15.
- ❖ Hoods & cable assembly service available – contact datamate@harwin.com.
- ❖ Spare contacts are available – see page 16.



SINGLE ROW		CALCULATION																	
A	B + 5.15																		
B	(Total No. of contacts – 1) x 2																		
																			
DOUBLE ROW		CALCULATION																	
A	B + 5.15																		
B	Total No. of contacts – 2																		
																			
TOOLS		WIRE STRIPPING DETAILS																	
Recommended Crimp Tool – M22520/2-01 Positioner – T5747 Contact Insertion/Removal Tool – Z80-280 See pages 77 to 79 ❖ Instruction sheets available at www.harwin.com/downloads/instructions																			
HOW TO ORDER																			
M80 - XXX XX XX																			
SERIES CODE		FINISH <table><tr><td>01</td><td>Gold + Tin</td><td>Ⓟ</td></tr><tr><td>05</td><td>Gold</td><td>Ⓟ</td></tr></table>		01	Gold + Tin	Ⓟ	05	Gold	Ⓟ										
01	Gold + Tin	Ⓟ																	
05	Gold	Ⓟ																	
TYPE <table><tr><td>788</td><td>Extra Small Bore, Double Row</td><td>889</td><td>Large Bore, Double Row</td></tr><tr><td>798</td><td>Extra Small Bore, Single Row</td><td>898</td><td>Small Bore, Single Row</td></tr><tr><td>888</td><td>Small Bore, Double Row</td><td>899</td><td>Large Bore, Single Row</td></tr></table>		788	Extra Small Bore, Double Row	889	Large Bore, Double Row	798	Extra Small Bore, Single Row	898	Small Bore, Single Row	888	Small Bore, Double Row	899	Large Bore, Single Row	TOTAL NO. OF CONTACTS <table><tr><td>Single Row</td><td>02 to 07, 17</td></tr><tr><td>Double Row</td><td>04, 06, 08, 10, 12, 14, 16, 18, 20, 26, 34</td></tr></table>		Single Row	02 to 07, 17	Double Row	04, 06, 08, 10, 12, 14, 16, 18, 20, 26, 34
788	Extra Small Bore, Double Row	889	Large Bore, Double Row																
798	Extra Small Bore, Single Row	898	Small Bore, Single Row																
888	Small Bore, Double Row	899	Large Bore, Single Row																
Single Row	02 to 07, 17																		
Double Row	04, 06, 08, 10, 12, 14, 16, 18, 20, 26, 34																		

All dimensions in mm.

www.harwin.com