 
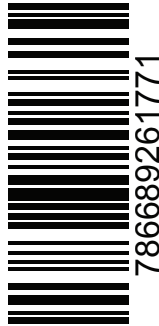 


PDG3 - Screw Terminal/End Cap 400 amps, 4 Poles
Cat. No. PDG3X4TS400
Quantity - 1


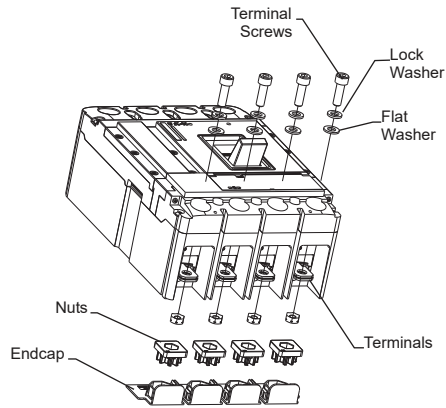


INSTALL END CAP PRIOR TO BREAKER INSTALLATION.

Instructions For Assembly:

- Place End Cap on Breaker.
- Install Breaker.
- Fasten Conductors (Install Bolted Connections).
- Torque Terminal Screws to 120-144 in-lb (14-16 N·m).

  PDG3 - Screw Terminal/End Cap 400 amps, 4 Poles
Cat. No. PDG3X4TS400
Quantity - 1

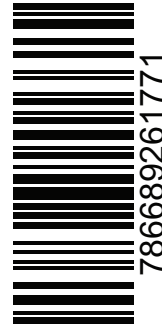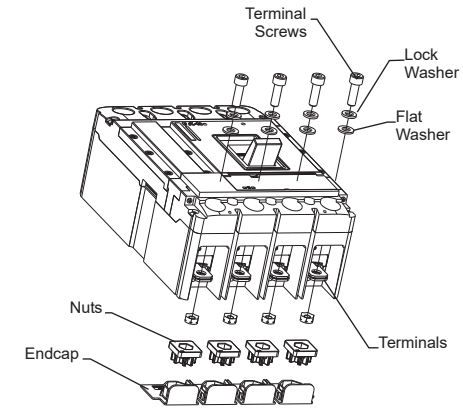



INSTALL END CAP PRIOR TO BREAKER INSTALLATION.

Instructions For Assembly:

- Place End Cap on Breaker.
- Install Breaker.
- Fasten Conductors (Install Bolted Connections).
- Torque Terminal Screws to 120-144 in-lb (14-16 N·m).



  PDG3 - Screw Terminal/End Cap 400 amps, 4 Poles
Cat. No. PDG3X4TS400
Quantity - 1

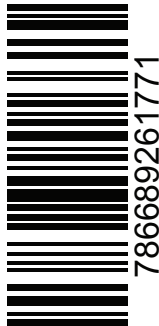
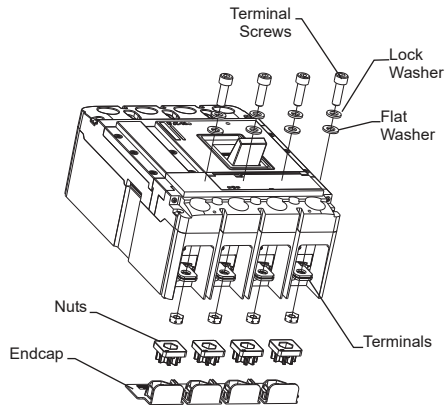


INSTALL END CAP PRIOR TO BREAKER INSTALLATION.

Instructions For Assembly:

- Place End Cap on Breaker.
- Install Breaker.
- Fasten Conductors (Install Bolted Connections).
- Torque Terminal Screws to 120-144 in-lb (14-16 N·m).

  PDG3 - Screw Terminal/End Cap 400 amps, 4 Poles
Cat. No. PDG3X4TS400
Quantity - 1

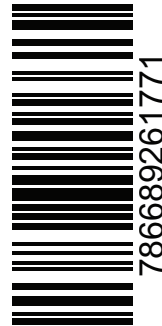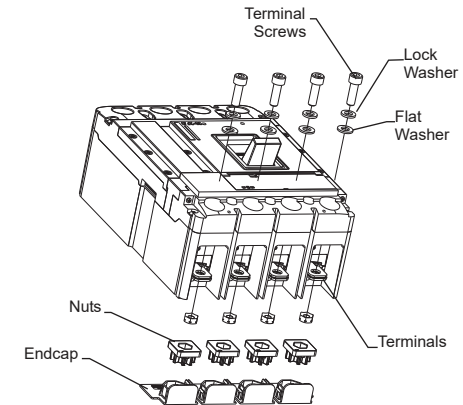

INSTALL END CAP PRIOR TO BREAKER INSTALLATION.

Instructions For Assembly:

- Place End Cap on Breaker.
- Install Breaker.
- Fasten Conductors (Install Bolted Connections).
- Torque Terminal Screws to 120-144 in-lb (14-16 N·m).