


BL20 Economy Module
8 2-wire Analog Inputs U/I resp. 4 2/3-wire PT/Ni Inputs
BL20-E-8AI-U/I-4PT/Ni

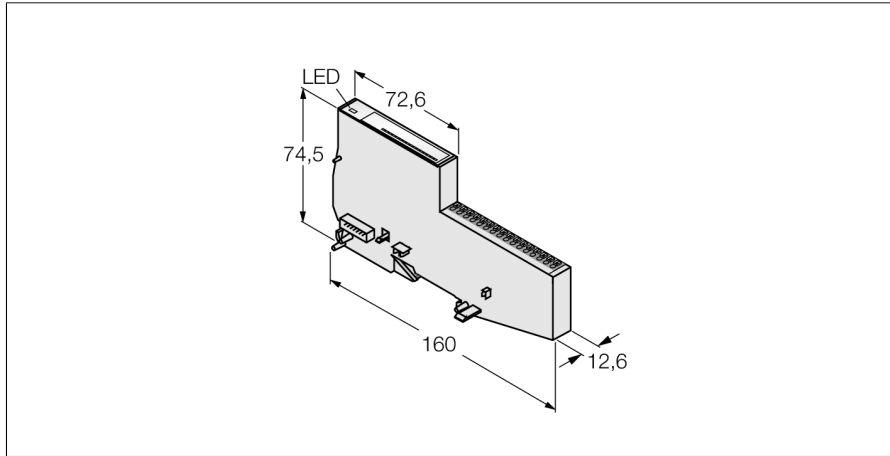

- Fieldbus-independent
- Electronics and connection technology in one housing
- Connectivity: Push-in terminals
- Protection class IP20
- LEDs indicate status and diagnostic
- Electronics galvanically separated from the field level via optocouplers
- 8 analog 2-wire inputs U/I
- Passive input - External supply
- 0 ... 20 mA, 4 ... 20 mA, -10 ... +10 VDC or 0 ... +10 VDC, selectable per channel
- Alternatively: 4PT/Ni inputs (always 2 analog inputs are combined to a PT/Ni 2/3-wire input)

Type	BL20-E-8AI-U/I-4PT/Ni
ID	6827325
Number of channels	8/4
Rated voltage from the supply terminal	24 VDC
Admissible range	18...30 VDC
Nominal current from field supply	≤ 35 mA
Nominal current from module bus	≤ 35 mA
Power dissipation, typical	≤ 1.5 W
Inputs	
Input type	0/4...20 mA, -10/0...10 VDC, Pt100, Pt200, Pt500, Pt1000, Ni100, Ni1000, 0...250 Ω, 0...400 Ω, 0...800 Ω, 0...2000 Ω, 0...4000 Ω
Input resistance	< 62 Ω (current) resp. > 98.5 kΩ (voltage)
Max. input current	current: 50 mA
Max. input voltage	Voltage: -20 VDC < U < 20 VDC
Electrical isolation	electronics for the field level
Output connectivity	Push-in
Maximum limiting frequency analog	1.5 Hz
Basic fault limit at 23 °C	< 0.2 %
Temperature coefficient	< 200 ppm/°C of full scale
Resolution	16 Bit
Measured-value display	16 bit signed integer 12 bit full range left-justified 12 bit left-justified
Conversion time	< (44 x [number of actively parametrized channels]) ms
Number of diagnostics bytes	8
Number of parameter bytes	8
Dimensions (W x L x H)	12.6 x 160 x 74.6 mm
Approvals	CE, cULus, zone 2, Class I, Div. 2
Ambient temperature	0...+55 °C
Storage temperature	-25...+85 °C
Relative humidity	15...95 %, no condensation allowed
Vibration test	Acc. to EN 61131
Shock test	Acc. to IEC 60068-2-27
Drop and topple	acc. to IEC 68-2-31 and free fall to IEC 68-2-32
Electromagnetic compatibility	Acc. to EN 50082-2
Protection class	IP20
MTTF	229 years acc. to SN 29500 (Ed. 99) 20 °C


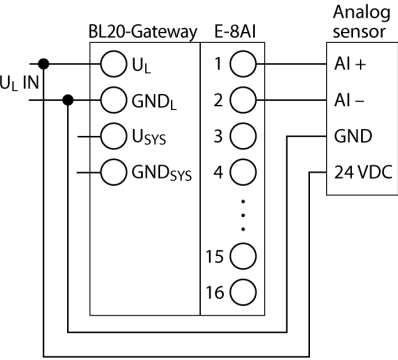
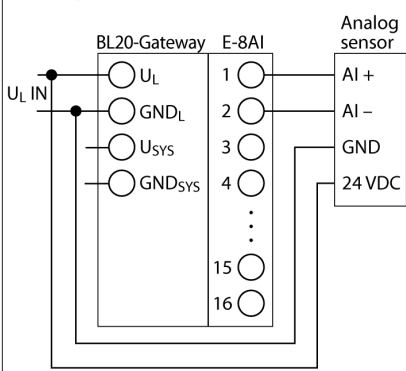
Functional principle

Electronics and connection technology are integrated in the housing. A base module is not needed. Economy modules and modules with separate electronics and connection technology can be fitted into a station, provided the base modules feature tension spring connections.

The use of gateways makes economy modules completely independent from the higher level fieldbus.

BL20 Economy Module
8 2-wire Analog Inputs U/I resp. 4 2/3-wire PT/Ni Inputs
BL20-E-8AI-U/I-4PT/Ni

Terminal assignment

	<p>Analog Inputs</p> <p>The pin assignment is dependent on the sensor type. Examples of the most common 2- and 4-wire sensors with electric current or voltage signal are listed below.</p> <p>Note: Open inputs and/or unused channels should not be programmed in the Pt/Ni or resistance (R) mode, because this may lead to minor measurement errors at adjacent channels. However, if this is necessary, the affected channels must be terminated with a resistance. Thereby the resistance value must be in the programmed measuring range.</p>	<p>Pin Assignment</p> <table border="1"> <thead> <tr> <th>U/I 2-wire</th> <th>PT/Ni 2-wire</th> <th>PT/Ni 3-wire</th> <th>Pin</th> </tr> </thead> <tbody> <tr><td>+</td><td>I+</td><td>I+</td><td>1</td></tr> <tr><td>-</td><td>I-</td><td>I-</td><td>2</td></tr> <tr><td>+</td><td>I+</td><td>I+</td><td>3</td></tr> <tr><td>-</td><td>I-</td><td>I-</td><td>4</td></tr> <tr><td>+</td><td>I+</td><td>I+</td><td>5</td></tr> <tr><td>-</td><td>I-</td><td>I-</td><td>6</td></tr> <tr><td>+</td><td>I+</td><td>I+</td><td>7</td></tr> <tr><td>-</td><td>I-</td><td>I-</td><td>8</td></tr> <tr><td>+</td><td>I+</td><td>I+</td><td>9</td></tr> <tr><td>-</td><td>I-</td><td>I-</td><td>10</td></tr> <tr><td>+</td><td>I+</td><td>I+</td><td>11</td></tr> <tr><td>-</td><td>I-</td><td>I-</td><td>12</td></tr> <tr><td>+</td><td>I+</td><td>I+</td><td>13</td></tr> <tr><td>-</td><td>I-</td><td>I-</td><td>14</td></tr> <tr><td>+</td><td>I+</td><td>I+</td><td>15</td></tr> <tr><td>-</td><td>I-</td><td>I-</td><td>16</td></tr> </tbody> </table>	U/I 2-wire	PT/Ni 2-wire	PT/Ni 3-wire	Pin	+	I+	I+	1	-	I-	I-	2	+	I+	I+	3	-	I-	I-	4	+	I+	I+	5	-	I-	I-	6	+	I+	I+	7	-	I-	I-	8	+	I+	I+	9	-	I-	I-	10	+	I+	I+	11	-	I-	I-	12	+	I+	I+	13	-	I-	I-	14	+	I+	I+	15	-	I-	I-	16
U/I 2-wire	PT/Ni 2-wire	PT/Ni 3-wire	Pin																																																																			
+	I+	I+	1																																																																			
-	I-	I-	2																																																																			
+	I+	I+	3																																																																			
-	I-	I-	4																																																																			
+	I+	I+	5																																																																			
-	I-	I-	6																																																																			
+	I+	I+	7																																																																			
-	I-	I-	8																																																																			
+	I+	I+	9																																																																			
-	I-	I-	10																																																																			
+	I+	I+	11																																																																			
-	I-	I-	12																																																																			
+	I+	I+	13																																																																			
-	I-	I-	14																																																																			
+	I+	I+	15																																																																			
-	I-	I-	16																																																																			
	<p>4-wire sensor (U/I)</p> <p>The sensor and the BL20 U_L fuse are fed from a common source. The sensor and the BL20 U_L fuse are automatically on the same GND potential.</p>	<p>Pin Assignment</p> 																																																																				
	<p>4-wire sensor (U/I)</p> <p>The sensor and the BL20 U_L are fed from different sources. U_L of the BL20 system and AI of the sensor must be on the same GND-potential. For this, U_L and AI must be bridged.</p>	<p>Pin Assignment</p> 																																																																				

BL20 Economy Module
8 2-wire Analog Inputs U/I resp. 4 2/3-wire PT/Ni Inputs
BL20-E-8AI-U/I-4PT/Ni

2-wire sensor (U/I)

The sensor and the BL20 U_L fuse are fed from a common source.
 The sensor and the BL20 U_L fuse are automatically on the same GND potential.

Pin Assignment

